

Setting the Scale Increment for the Values Scale Display

Select **Chart >> Chart Settings** on the menu. Press the **Scale** button. Set the **Scale Increment** the desired increment. Press **OK** to close Scale Settings window. Press **OK** to close the **Chart Settings** window.

*Last modified Monday, 12th September, 2022.